

Pyroweeder Flame Blade Accessory


ASSEMBLY INSTRUCTIONS



Attaching the Flame Blade Accessory

Tools Needed: 7/16" socket or wrench and a Phillips screwdriver

1. Remove the 1/4"-20 nuts **A** and 1/4" oversize washers **B** from the 1/4"-20 carriage bolts **C** protruding through the bottom panel **D** of the flame blade.
2. Open up space at back of the two panels—clam shell style—as shown, pivoting on the front screws **E**.
3. Insert the Pyroweeder burners **F** through the cutouts **G** in the top and bottom panels as shown. Keep about 1" of the burner outside of the flame blade. **H**
4. Close the two panels around the burners so that the carriage bolts **C** are again protruding through the bottom panel **D**.
5. Re-attach the nuts **A** and washers **B** to the carriage bolts **C** and tighten them just enough so that the flame blade is securely attached to the burners.
6. Tighten the front screws **E**.

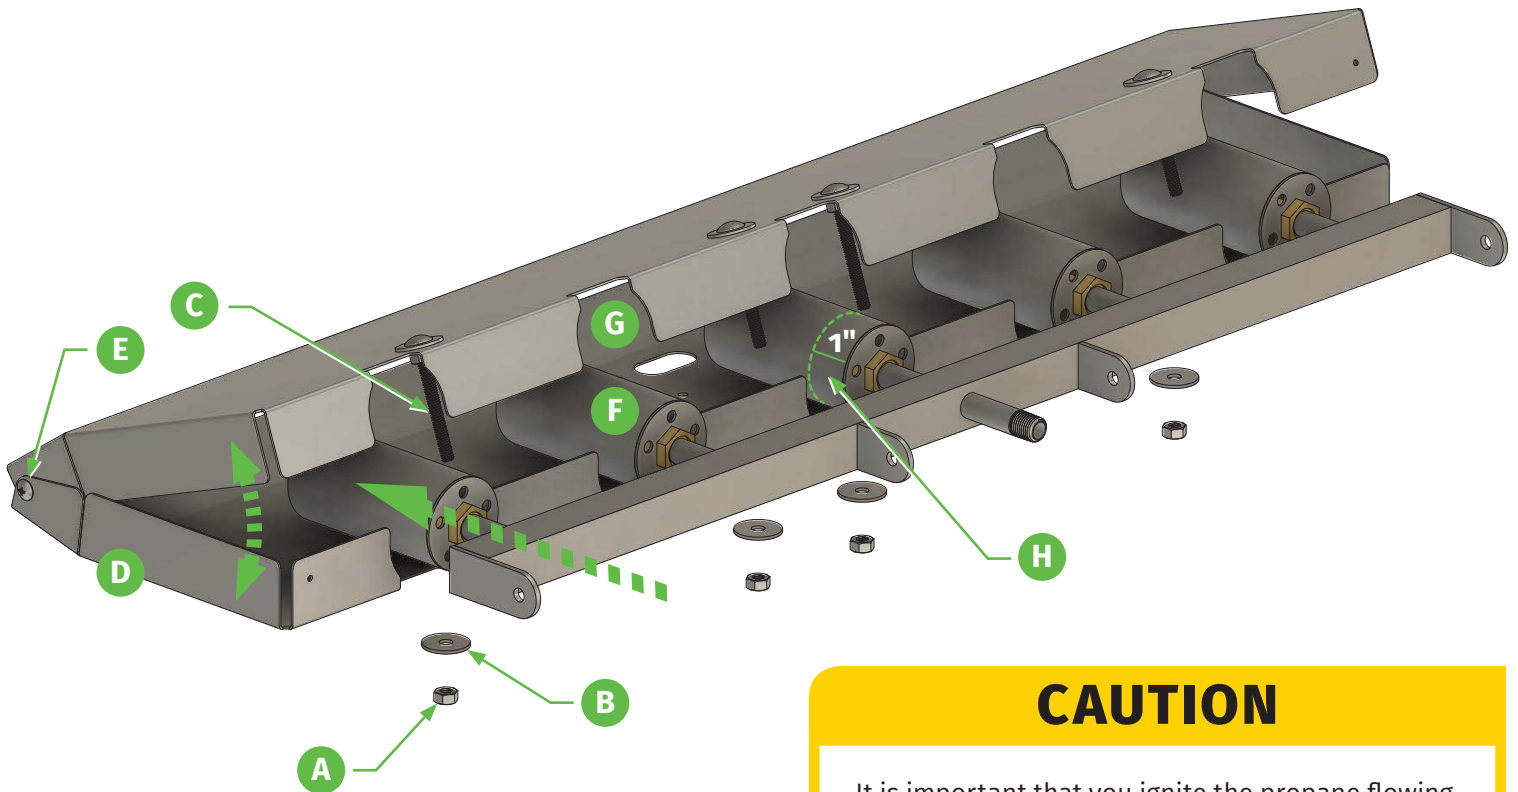

CAUTION

It is important that you ignite the propane flowing into the flame blade **as soon as possible after you open the control valve**. Propane can accumulate in and around the blade and it will produce a startling pop if you are slow to ignite it.